INSTALLING COIORDMD LED DISPLAY IN BALLY GAMES WITH DISPLAY ON LAMP BOARD

These instructions are for mounting a ColorDMD LED display in a Bally game that has the display mounted on the swinging backbox lamp board (Gilligan, Black Rose, Party Zone)

WHAT YOU'LL NEED


- * ColorDMD LED Display for WPC
- * 4 #6 self tapping screws 1/2" to 3/4" long
- * 1/2" Thick weather stripping (OPTIONAL -- NOT INCLUDED)

THE PROCESS


- * Remove the original display
- * Disconnect the ColorDMD circuit board from the display
- * Mount the ColorDMD in place of the old display
- * Mount the ColorDMD circuit board on the back of the lamp board

REMOVE THE ORIGINAL DISPLAY

- * Open the backbox and remove the backglass/translite
- * Swing the lamp board door open and disconnect the Signal and Power connections on the DMD

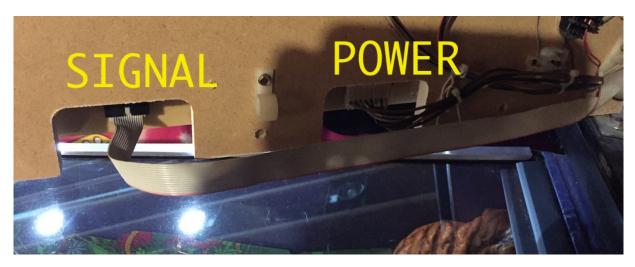


- * Close the lamp board door
- BE VERY CAREFUL WITH THIS NEXT PART -
- * Remove the original display by squeezing the plastic pin flange in so the pin can pop through the hole
 - These pegs are likely to be brittle due to age, be gentle with them
 - Work your way around the display popping the 6 pegs free
 - The pegs are press fit into the lamp board, not screw in, if they come loose, they likely aren't going back in solid.
- * Once the display is removed, you need to remove the 2 center plastic pegs
 - You can try to wiggle them out gently, but chances are they'll be destroyed in the process
 - The pegs are press fit and intended for single use

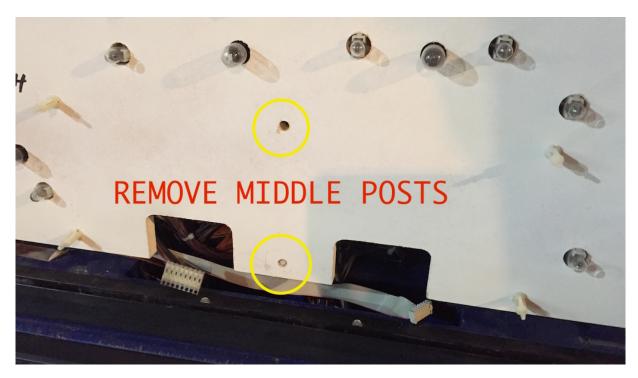

- * You should be left with the 4 corner posts, hopefully still in good condition
- * You may want to use a toothpick or tiny screw driver to push out the pin flanges gently so they clip better on the new display.

DISCONNECT THE ColorDMD CIRCUIT BOARD

- * The ColorDMD circuit board is held on to the frame by the same type of pegs.
- * Use the same process of squeezing the pin closed and popping off the circuit board, carefully.

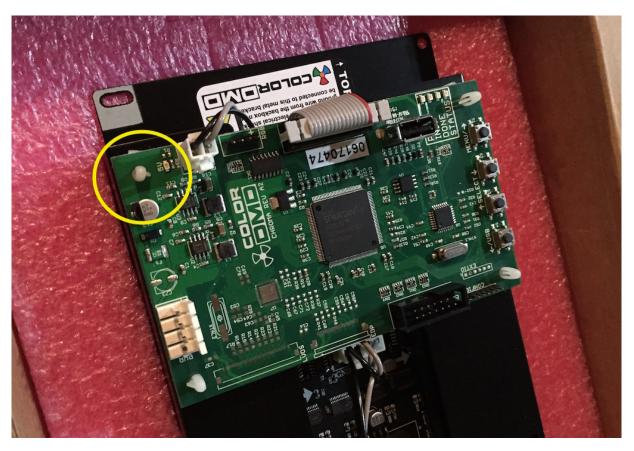

- * Once you have the board removed, you'll have 4 plastic posts those have to go. * You don't have to disconnect the circuit board cables just be careful handling it.
- * These pegs are intended to be single use, the easiest thing to do is grab them with a pliers and snap them off.



MOUNT THE ColorDMD ON THE LAMP BOARD

- * The fit of the ColorDMD LED display on the original pegs is a bit snug.

 * You may want to use your thumb to press down the wires on the various plugs a bit to lower their profile.

 * Fit one end of the included ground strap (Green cable) onto the plastic post on the lower left.

- * Align the ColorDMD LED circuit board should be below the display (Picture does not show ground)

 The ColorDMD LED circuit board should be below the display (Picture does not show ground) strap - be sure not to forget that)



MOUNT THE COlorDMD LED DISPLAY CIRCUIT BOARD ON THE BACK OF THE LAMP BOARD

- * CAREFULLY open the backbox lamp board door so you can get to the back of it
- * Use the 4 included 1/4" spacers and 4 screws to mount the circuit board to the back of the lamp board
 - #6 screws will fit through the holes on the circuit board easily
 DON'T FORCE SCREWS AND DAMAGE THE BOARD
 1/2" screws will work, but 5/8" or 3/4" would hold better

 - Don't over tighten! The lamp board is particle board and can strip out easily



- * Connect the DMD signal cable from the game to the DMD in connection on the Circuit board with the RED line towards the buttons
- * Locate the included 4-pin ColorDMD LED power cable. One end of the cable has a single connector. Plug this connector into the PWR header on the ColorDMD LED.
- * Plug the other end of the ColorDMD LED Power Cable into J-116 on WPC games or J-138 on WPC95 games. If an existing cable is currently plugged into J-116 / J-138, disconnect it before connecting ColorDMD LED Power Cable and use the included male-to-male adapter to also re-connect the existing cable to the ColorDMD LED Power Cable.

With everything connected, you can close the lamp board and power up the game.

